MP3-DJ Sport User's manual

Index

Chapter 1：Summary……..……..3
1-1 Function Description……..……3
1-2 System Requirements……..……4
1-3 Package Contents……..……..4
1-4 Product Key Function……..……..5
Chapter 2：Software Installation……..……..5
Chapter 3：Connecting to PC……6
Chapter 4：Downloading data and music files……..……..7
Chapter 5：Screen Introduction and Function Description……8
5-1 LCD Screen Display……..8
5-2 Function Description……..8
One：Turn on the player……..……8
Two： Music Playing Function……8
Three：Digital Voice Recorder Function……10
Four：FM Radio Function……11
Five：Special Illumination for Sport Test Function……..12
Six：Strap wear indicator……..……..13
Seven：Arm Strap wear indicator.....13
Eight：Sport Test Function.....14
Nine：System Parameter Setting Function.....15
Ten: Browser……17
Eleven：Return to Main Menu.....17
Twelve：Turn off the player…….....17
Chapter 6：Q & A……......17
Chapter 7：Technical Specifications.....18

Attention:

1. Incorrect operation will ruin the player. Do not drop the player or you may cause damage to it.
2. Unlock the “HOLD” button before using the player.
3. If you don’t use the player for a long time, remove the battery to prevent any damage caused by a leaky battery.
4. When you use the earphone, avoid turning the volume to high; it could damage your hearing. Listen to the player at a volume that is safe.
5. If you feel tinnitus, please decrease the volume or stop using the player.

Safety Operation:

1. We recommend you use the player in an environment between 0’c ~ 40’c.
2. You can store or transport the player between a temperature of 0’c ~ 60’c.
3. Please operate the player between 10%RH ~ 85%RH humidity.
4. You can store a player in a place with the humidity between 5%RH ~ 90%RH.
5. Don’t drop the player during operation because it may cause scratches or damage to internal components.
6. To avoid static when using the player, do not operate the player in a very dry environment.
7. To reduce the possibility of getting an electric shock or being injured, please don’t use the player in the water, or near water or in a humid environment.

Chapter 1: Summary

1-1 Function Description

Music Playing Function

1. Supports MP3/WMA/WAV music format and ID3 information display
2. Supports multi-language song information display in English, French, German, Italian, Spanish, Portuguese , Brazilian, Dutch, Russian, Simplified and Traditional Chinese.
3. Five sound effect modes, five playing mode selections.
4. 32 levels of volume adjustment

Digital Voice Recorder

1. Uses professional WAV recording sampling format
2. Three recording quality options: Normal, Fine, Best
3. High crystal digital recording and low noise MIC recording

FM Radio Function

1. Built-in digital stereo FM radio
2. Capability for setting 30 FM channels for frequent reception
3. Manual/Automatic FM channel searching function
4. The FM channel program can be recorded constantly while listening, and be uploaded to your computer for storage

Portable Storage Function

1. Capable to store files as portable storage disc
2. No driver required for Windows 2000 or higher operation system
3. Supports FAT16/32 file system
4. Mini USB 2.0 port

5. Can delete files in the player to recover capacity

LRC File Display Function

1. Supports LRC format file display
2. Enjoy music while viewing song text in LRC format

Fast Recording Function

In the sub-menu operation interface, pressing REC button for a while will enter MIC recording mode. After entering the mode, press REC to start recording and press REC again to pause recording. Press MENU to stop recording.

Sport Test Function

1. This player possesses the functions of a running counter. It can automatically count the energy that you have spent and the distance by your steps。So you can exercise listening to music。
2. Personal File Setting**:** You can input your personal file before using this function.

1-2 System Requirements

- Pentium MMX200 or higher CPU
- 40MB capacity or higher
- A capable Mini USB port
- Quadruple or higher CD-ROM
- Operation system: Microsoft Windows 98SE, ME, 2000, XP and Windows MCE, Mac 9.2.2 or higher operation system。

1-3 Package Contents:

In the MP3 DJ Sport Player package, make sure you have the following accessories:

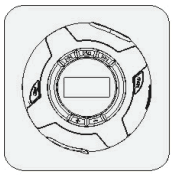
MP3 Player

Lanyard

Driver CD

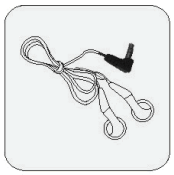
Earphone

USB Cable

Quick Guide

Battery

MP3 Cover

Arm Strap

1-4 Product Key Function

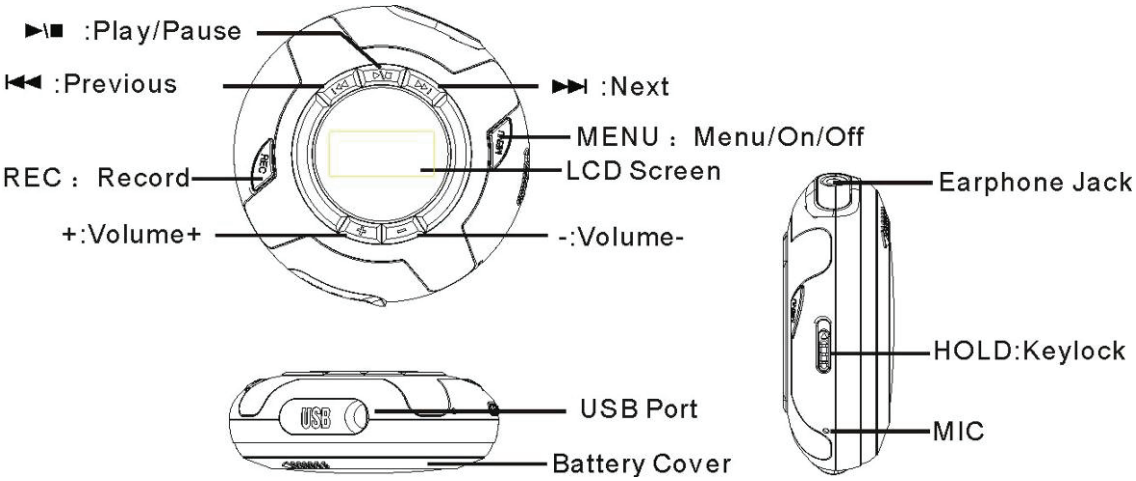

Chapter 2:Software Installation

For Windows 98SE

If your PC's Operation System is Windows 2000 or higher, you can connect the player to your PC directly and upload/download the data/files without installing the driver

If the Operation System is Windows 98, follow these procedures:

1. Put the attached disc into the CD-ROM of your PC/Notebook PC.
2. Under Windows, open the disc, execute "Setup.exe" and follow the directions.

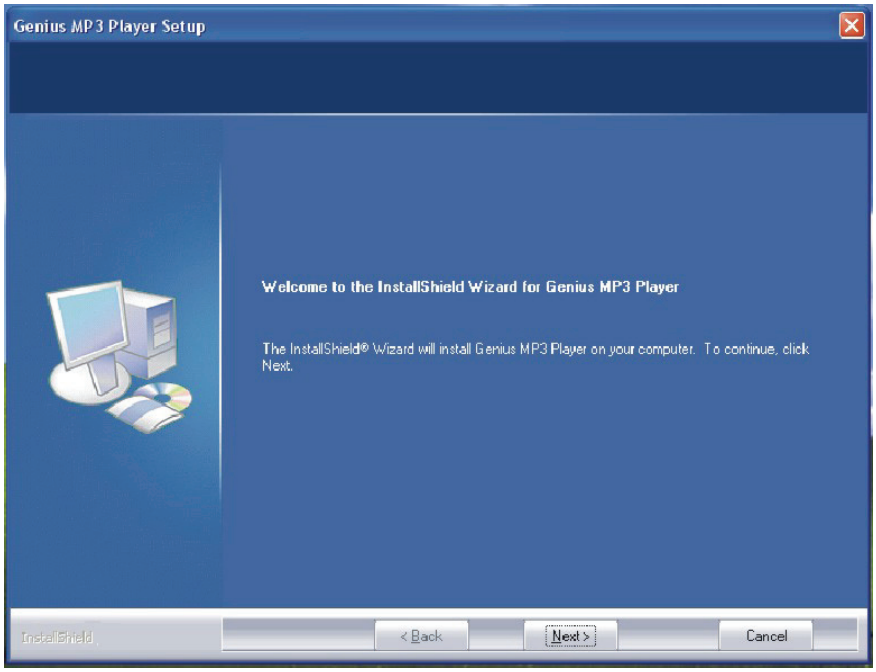
Genius MP3 Player Setup
Welcome to the InstallShield Wizard for Genius MP3 Player
The InstallShield® Wizard will install Genius MP3 Player on your computer. To continue, click Next.
InstallShield
< Back
Next >
Cancel

3. When the installation is finished, two programs will appear in the directory "MP3 Player"
   Firmware Download: software upgrading program
   Uninstall: Un-install program

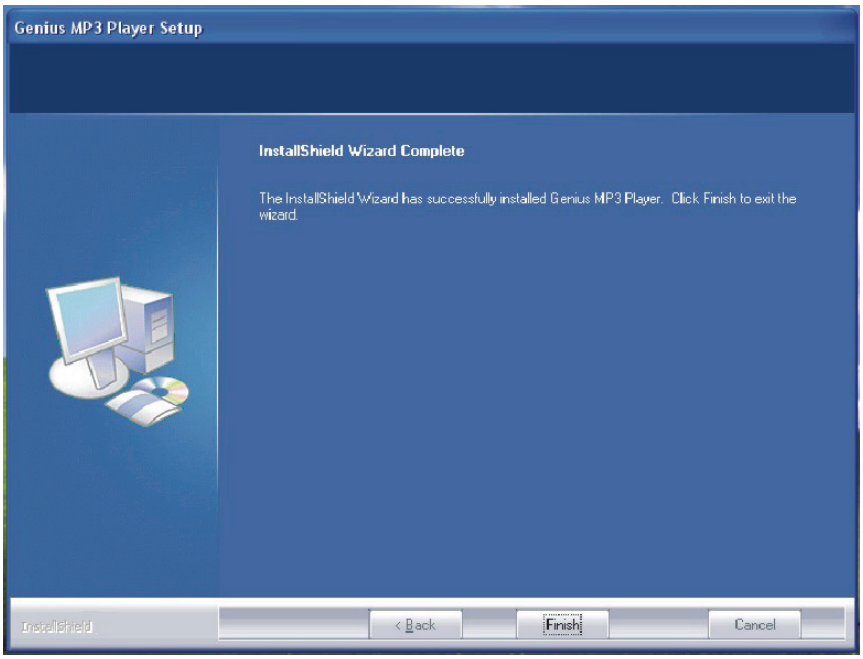

Chapter 3: Connecting to PC

The player has a USB port, so you can connect it to your computer directly no matter if the power is on/off。

1. Plug the mini USB port of USB cable to the USB connector of MP3 Player
2. Connecting another end of USB cable to the USB port of your PC
3. When the image below is displayed on the screen, the connection is successful

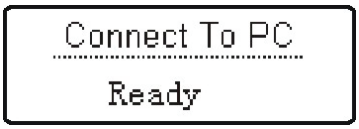

4. The PC will find the new hardware, and it will install the driver program automatically
5. After finishing the installation, you can enjoy your MP3 player now. (Open “My Computer”, you can see the “Removable Disk” as shown below)

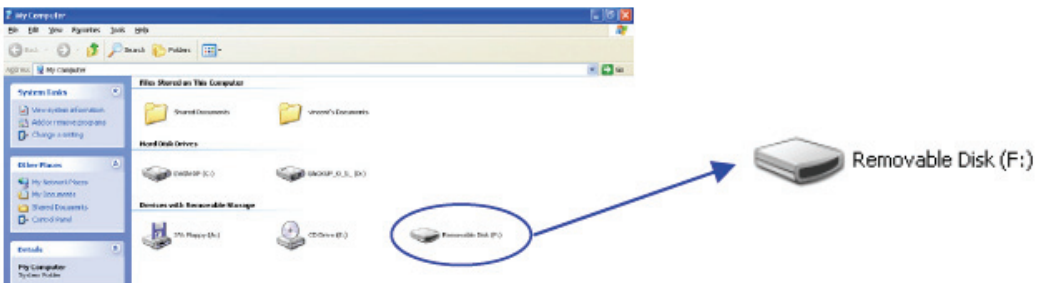

Attention：

When your PC is transferring the data to the player, if the connection stops, the data and the files of the computer will be lost. Please use the player according to your Operation System。

Chapter 4: Downloading data and music files

The player can be used as a portable storage disk. You do not need a file management tool. Just use the file management of the OS; it is easy to operate the player. Portable storage disk can increase the capacity of the player。

First, build the connection, then:

1. Choose the music which you want to download
2. Click the right key of the mouse and choose “Copy”
3. Open “Removable Disk”
4. Click the right key of the mouse and choose “Paste”

The screen will display “Writing” and “Reading” while copying and reading the file. It will disappear after copy is finished completely. Then you can quit.

Attention:

If your Operation System is Windows ME, 2000, XP, just connect the player to your PC, and you will see the icon (below) on the taskbar of Windows. Click the icon twice, the “Pull out the hardware” will appear. Choose “Stop”, then “Stop hardware Equipment” will appear. Click “Confirm”, “Pull out hardware safely” will be shown, then click “Confirm” again, and you can cut the connection between the PC and the player。

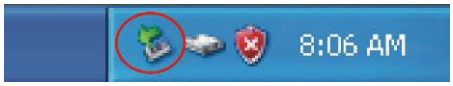

Chapter 5：Screen Introduction and Function Description

5-1 Screen Display

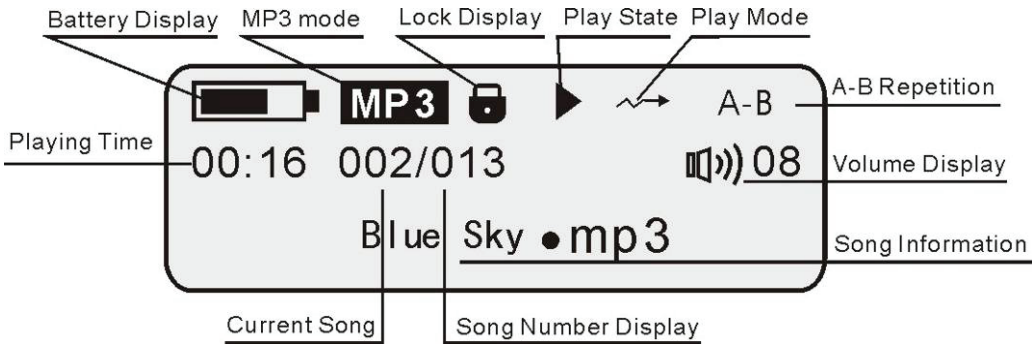

5-2 Function Description

Please unlock the HOLD button before using.

One. Turn on the player

Press ►\■ to turn on the player and the welcome slogan will be displayed, and then the Main Menu interface will be displayed. Under the main menu, there are six modes: MUSIC, RECORD, FM TUNER, SPORT, Browser and SETTING. Press ⏮ or ⏭ to choose a different mode.

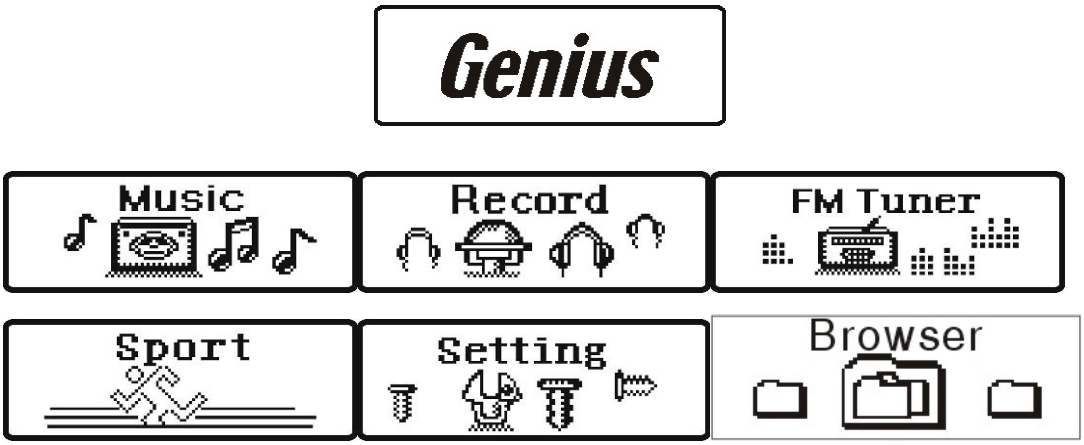

Two. Music Playing Function

Under Main Menu mode, press ⏮ or ⏭ to choose “MUSIC” and press ►\■ to enter Music Playing mode.

(The Music selection screen)

1. Play Song Selections

Under the main menu, press ►\■ to choose “Play Music”, then press FW/FF to enter music playing function. What appears is the first song (song’s sequence is according to the system’s auto-arrangement). Press ⏮ or ⏭ to select the previous or next song. After the selection, press ►\■ to play.

When playing, press ►\■ to pause, and pressing ►\■ again to continue playing. Holding down and pressing ►\■ will stop playing, and pressing ►\■ for a long time will switch off the player.

2. Fast Forward/ Fast Backward or Repeat

When playing, holding ⏮ or ⏭ for more than half a second can rewind or forward. Stop holding, and the songs will be displayed from the point where you stop holding.

3. Volume Adjustment

Press + or − to increase or decrease the volume in 12 different levels, from 00 to 30.

4. A-B Circulation

When playing, pressing “MENU” button shortly can decide the circulation start point. And on the top right corner of the screen, ”A-” will be displayed. Pressing “MENU” shortly again can decide the circulation end point. And on the top right side of the screen, ”A-B” will be displayed. At this moment, the content between “A-B” will be played circularly. Pressing “MENU” for the third time will cancel the circulation.

Under pause or stop mode, press “MENU” shortly to enter function selection and choose the function menu (Effect, Play Mode, Del this music). Choose the needed function, and then press ►\■ to finish the setting and press “MENU” for several seconds to return to where you were.

5. Sound Effect Adjustment

After you choose “Effect”, press ►\■ to enter sound effect adjustment. Sound effects include: Normal, Rock, Jazz, Classic and Pop. Move ►\■ to choose sound effects. Press “MENU” to return.

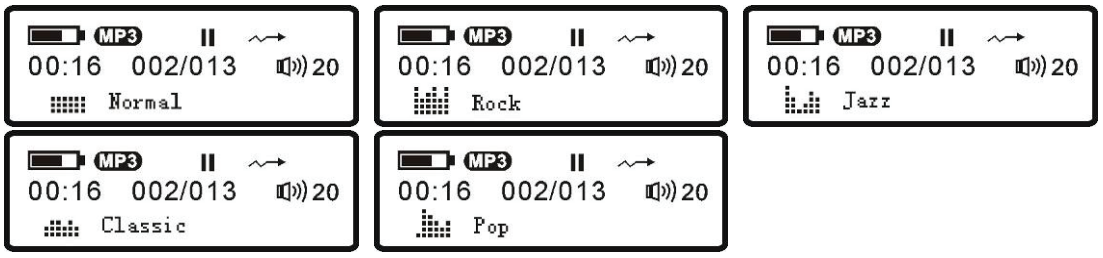

6. Setting Playing Mode

After you select “Playing Mode”, press ►\■ to enter playing mode selection, which includes: Normal, Repeat one, Repeat all, Shuffle and Repeat Shuffle. Then press ►\■ to enter the mode you want. Press “MENU” to return.

7. Song Deletion

Select Del this muse" and press ►\■ to enter the function. Then you choose: "Delete File? Yes No", move ⏮ or ⏭ and choose "Yes", press ►\■ to finish deletion. Press "MENU" to quit deletion.

Three. Digital Voice Recorder Function

Under the main menu, please move ⏮ or ⏭ to choose "RECORD" item and press ►\■ to enter this function mode.

(The Record selection screen)

1. Microphone Recording Function

When you enter the mode, press "MENU" shortly. When you select " MIC", then press ⏮ or ⏭ to choose the menu (MIC Record, Play mode, Del this music).

When you choose "MIC", press ►\■ to begin recording. (• will be displayed)

Recording time will be displayed during recording. When recording, press ►\■ to pause. (•II will be displayed) Press "MENU" to stop recording.

If you want to stop the recording, press "MENU" to stop and the record file will be saved automatically. The file name will be V001.WAV, V002.WAV, etc.

2. Playing Recorded File

After entering "RECORD" mode, press ⏮ or ⏭ to select recorded file, then press ►\■ to begin playing. When playing, press ►\■ to pause. Press ►\■ again to continue playing.

3. Playing Mode

During playing recorded file, press ►\■ to pause or stop playing, press “MENU” shortly to enter function choice. Press ⏮ or ⏭ to choose “Playing Mode”, and press ►\■ to enter the three mode choices: Normal, Repeat one and Repeat all. Choose the needed mode and press ►\■ to finish the setting. Press “MENU” to return.

4. Uploading the recorded file to computer

The player can automatically save the MIC recorded file under Voice folder. You just need to connect the player to the computer and select the file, then copy it into the computer.

5.REC Function

When the player pauses or stops playing, play record or stop, and listen to FM, press the “REC” for a long time, the player will enter the “RECORD” mode. The recorded file will be saved in WAV format. Under the mode of “Music Playing”, “Digital Voice Recorder” and “FM Radio”, press the “REC” to enter the function of running counter. Under the mode, press “MENU” for a long time to return.

Four. FM Radio Function

The earphone serves as the antenna when FM radio function is on, so please do not pull it out.
Under the main menu, press ⏮ or ⏭ to choose “FM TUNER”. Press ►\■ to enter this function mode.

(The FM tuner selection screen)

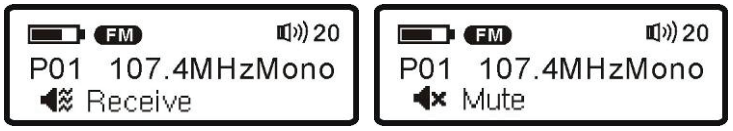

Press “MENU” shortly to go to the sub-menu, which includes the following functions: Manual Searching, Auto searching, FM Record, Del this channel.

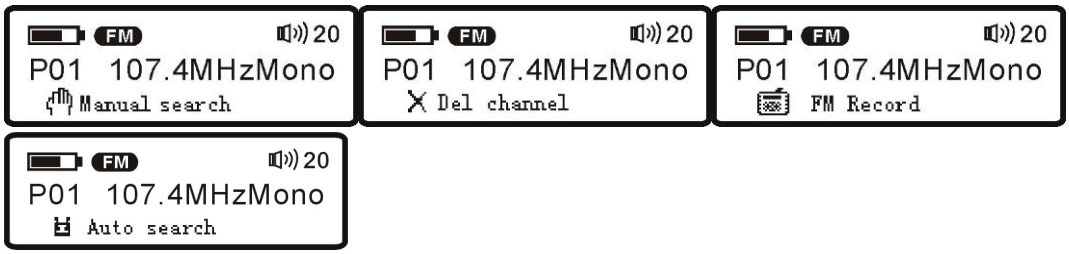

1. Manual Searching

Under manual FM channel searching function mode, pressing ⏮ or ⏭ will adjust FM frequency at 0.1MHz each time. If you want to save the clear channel, please press ►\■ shortly to enter channel-preset function, press ⏮ or ⏭ for the position where you can select to save, press ►\■ for the player to show you the channel’s position after successful saving (form P01 to P30).

2. Auto Searching

Under manual FM channel searching function mode, you can also press ⏮ or ⏭ for a long time to search FM channel forward or backward quickly. When a clear signal is received, the screen will stop searching. And now if you press ⏯ , you can save the channel.

3.FM Record

Under the “FM Radio Function”, pressing ⏯ can record the FM program you are receiving, while recording, press ⏯ to pause. Press ⏯ again to continue recording. The recorded file will be automatically saved in the “FM” file. If you want to play the recorded file, you can enter “Play music” and select the file to play.

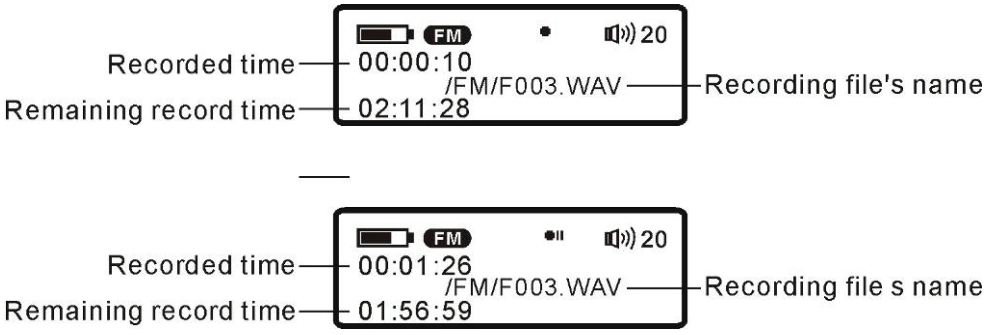

If you want to stop the recording, press MENU to stop the recording.

4. Del this channel

Under delete preset channel function mode, press ⏯ to enter the interface, press ⏮ or ⏭ to choose “Yes”. And then press ⏯ to finish deletion. Press “MENU” to turn back.

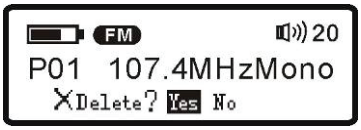

Five. Special Illumination for Sport Test Function

This player possesses the functions of a step counter. It is convenient for your use when doing sports. Also it can be used as personal aid-device for bodybuilding. There is no need for you to make complicated computation or record your sport efficiency; the player builds in several sport modes. Please input your personal file (stride, height, age and weight) before using this function. Then you can exercise while enjoying music and get the sport result after finishing your exercise. The operation details are as below:

Running Counter

According to the advice of a medical expert, it is better for males over 35 and females over 30 to keep walking for more than 8000 steps; otherwise many illnesses caused by fatness build-up and physical hypo function, cardiopathy, high pressure and so on.

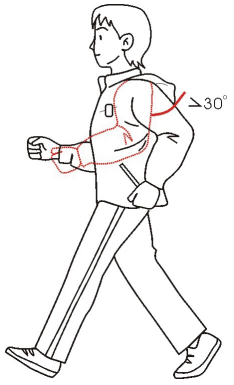

The Calorie consumption and sport effect of each person will be verified by gender differences by age, height and weight. To ensure the correct measurement result, please input the right personal file before using this function. The player will record the result and automatically make the computation of Calorie consumption and let you check the result at any time.

When stepping and running speed changes greatly or swinging arms irregular: Stepping less than 100 steps per minute. The angle less than 30 degrees when the arms swing

Attention: This player is a precision instrument, thus please keep the player face up (as shown below). We suggest you wear the player by the pouch or wrist strap, which can be used to

avoid the incorrect measurement result.

Six：Strap wearing indication

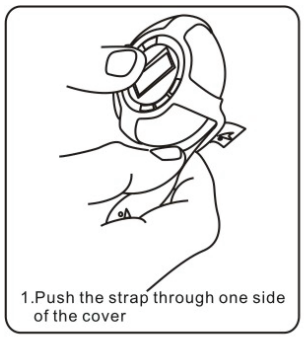
1.Push the strap through one side of the cover

2.Move the strap to the other side

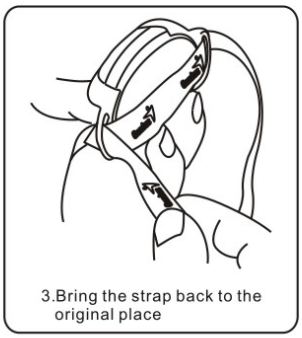
3.Bring the strap back to the original place

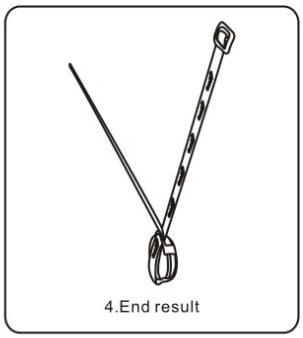
4.End result

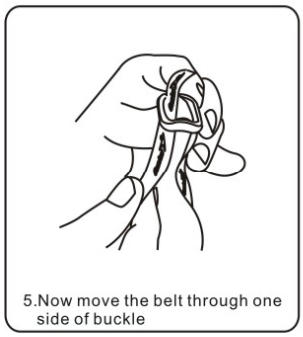
5.Now move the belt through one side of buckle

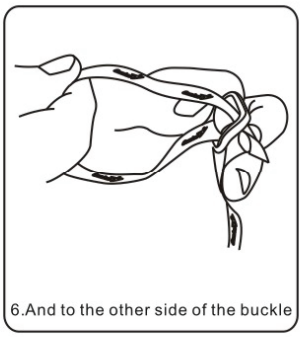
6.And to the other side of the buckle

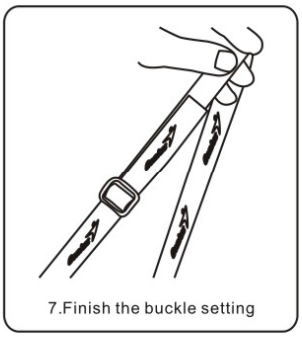
7.Finish the buckle setting

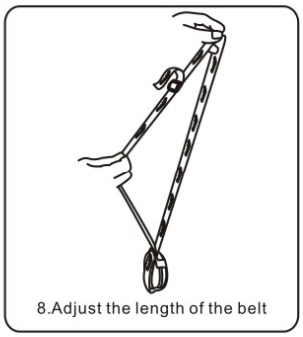
8.Adjust the length of the belt

9.Plug the earphone into the earphone connector of the player

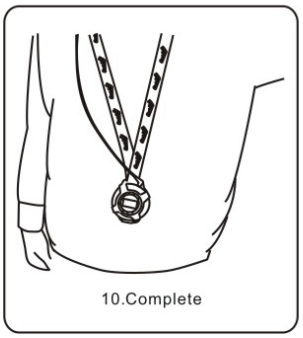
10.Complete

Seven. Arm Strap wearing indication

1.Put the arm strap lid on the player

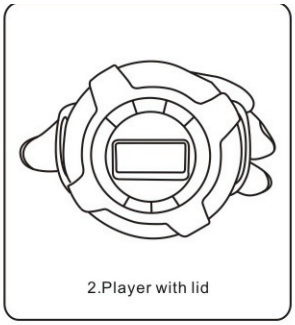
2.Player with lid

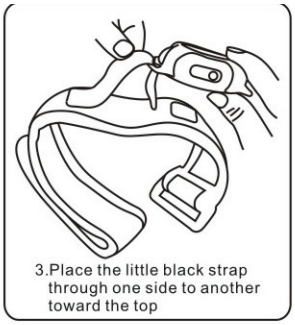
3.Place the little black strap through one side to another toward the top

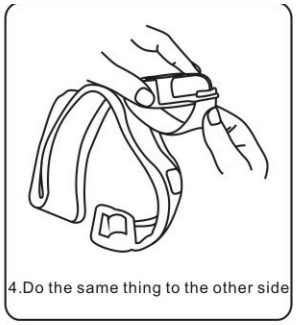
4.Do the same thing to the other side

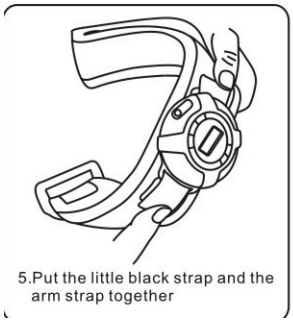
5.Put the little black strap and the arm strap together

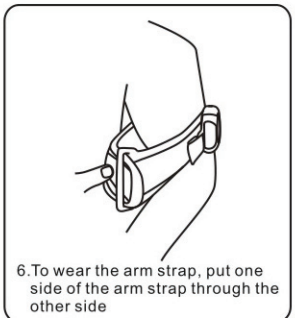
6.To wear the arm strap, put one side of the arm strap through the other side

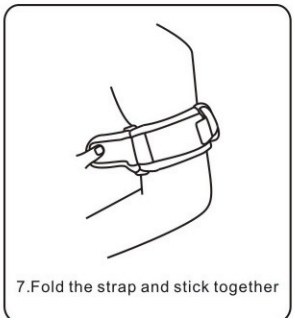
7.Fold the strap and stick together

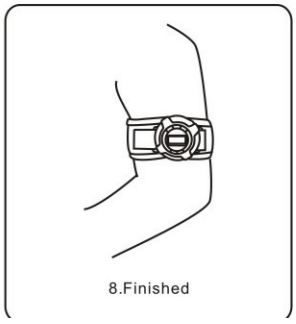
8.Finished

Eight. Sport Test Function

1. Under Main Menu interface, press ⏮ or ⏭ to select “Sport” and press ⏯

2. After entering this mode, press ⏮ or ⏭ , you can browse the sport items. (Step Count, Note etc.) **PDE**: Physical, Distance, Effect

3. Running Count: After entering this mode, Press ⏯ to enter “sport” mode, and start this function. The system will compute the distance automatically according to your steps (unit: KM); it also can compute the energy you used according to your weight and the distance. (as shown below)

Attentions: When running, the counter will be valid if your arm wave degree is more than 30 degree

Under this mode, press “MENU”, to show a third menu at the bottom (Save file, Browse file, Delete file)

Save file: Press ⏯ and the screen will display and it shows that you can keep the sport record under this file name. Pressing ⏮ or ⏭ , you also can select the other file names to keep the record in and there are 10 files for your choice.
Browse file: Press ⏯ to enter and you can browse the saved files by moving ⏮ or ⏭
Delete file: Press ⏯ and the screen will delete the file.

4. Press ⏯ to enter this item and the user can set the swing, weight, height and age. This numerical value will affect the calorie result and the distance (the unit of step and height is CM, the unit of weight is KG and the minimum value should not be less than 30KG. Age cannot be more than 120). After entering the settings of your personal file, press ⏮ or ⏭ to select the items and press ⏯ to enter, and then press ⏮ or ⏭ to adjust the value and press ⏯ to confirm. Press “MENU” shortly to turn back.

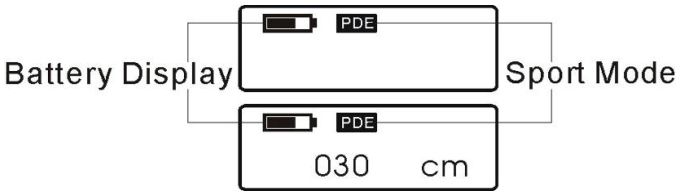

Nine. System Setting Function

Under the main menu interface, when the player selects “SETTING”, pressing ►\■ will enter the function. There are seven choices: Contrast , Backlight , Power saving , Recording quality , Button voice , language , and about.

1. Contrast: Screen contrast degree setting

You can use ⏮ and ⏭ to adjust the contrast.

2. Backlight: Screen backlight on/off setting (backlight 5 seconds, 15 seconds, 30 seconds, backlight on, backlight off)

You can choose the backlight timer with 5,15,30 second. Also can turn off the backlight or keep the backlight open.

3. Power saving: If you are not using the player for a certain amount of time, it will turn off automatically (power saving 1 minute, 2 minutes, 5 minutes, no power saving).

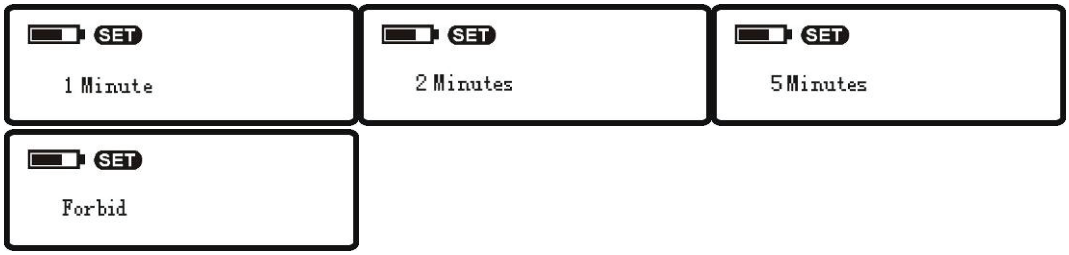

4. Recording quality: According to the different sampling rates, the player sets three recording quality (Best: Bit rate 128Kbps, Fine: Bit rate 64Kbps, and Normal: Bit rate 32Kbps). The recording quality is set to be “Fine” when the player is switched on. Choosing “Best” sampling rate can get better recording quality, but the record time will become shorter, while choosing the lower sampling rate can make the time longer.

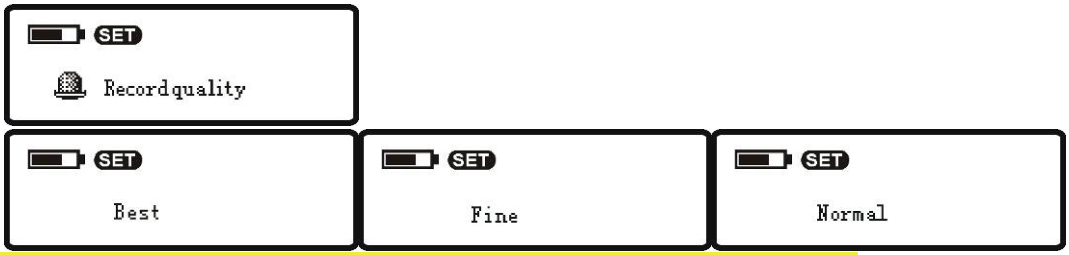

Attention : The record time will depend on different quality and capacity.
The recording time : HH:MM:SS

Memory	Recording quality	Bit rate	Record time
512MB	Best	128Kbps	08:55:18
	Fine	64Kbps	17:50:37
	Normal	32Kbps	35:41:32
1GB	Best	128Kbps	18:02:33
	Fine	64Kbps	36:05:06
	Normal	32Kbps	72:10:45
2GB	Best	128Kbps	35:55:54
	Fine	64Kbps	71:51:46
	Normal	32Kbps	143:51:46

5. Button Voice: press ⏮ or ⏭ to choose on or off

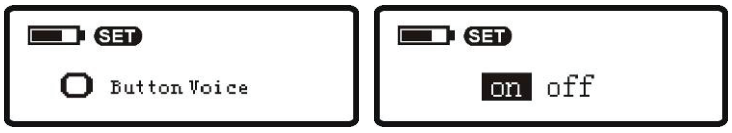

6. Languages: press ⏮ or ⏭ to select English, French, German, Italian, Spanish, Portuguese Brazilian, Dutch, Russian, Simplified and Traditional Chinese. Press ⏯ to confirm your selection.

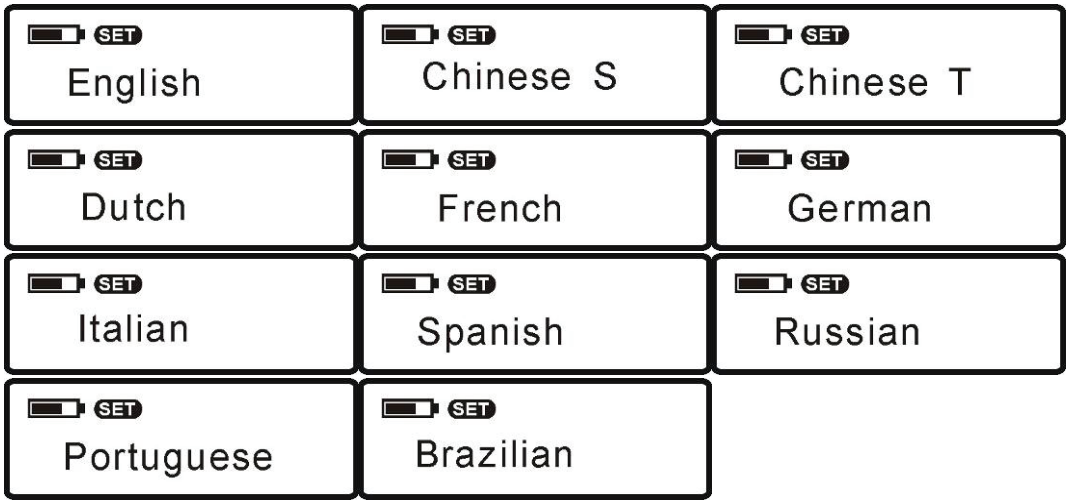

7. About: Check the player's capacity, the current available space and the version.

Ten: Browser

(1) Under "Play Music" state, press MENU to enter the main option.

(2) Press ⏮ or ⏭ to choose the music which you want to play.

(3) After you choose the music, press MENU the "+" will be displayed. It means the music has been added in the list.

(4) If you want to add music again, press ⏮ or ⏭ another time, after you choose the music, press MENU. The music will be added.

(5) Press MENU for several seconds to return to the main menu. Press ⏯ and the player will play music according to the list.

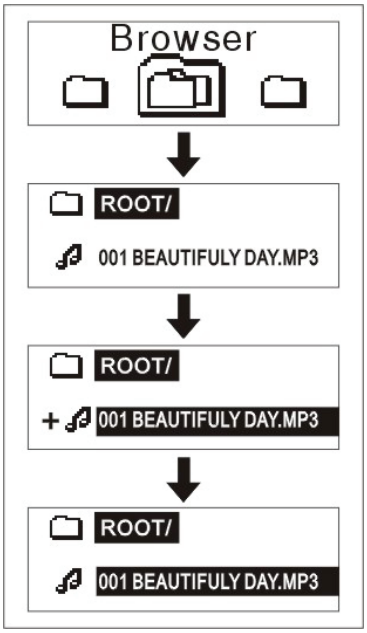

Eleven: Return to Main Menu

Under the function sub-menu, pressing "MENU" can return to the above menu one level at a time, Pressing "MENU" for 0.5 second can return to the main menu if the player is under one the four main menu items.

Twelve: Turn Off the player

Under the main menu, holding on ⏯ button for a long time will turn off power.

Chapter 6: Q & A

1. **After pressing PLAY to switch on the player, nothing is displayed on the screen, why?**
   Causes and solution:
   No battery is in the player; improper placing of the battery or powerless battery.

2. **No sound when playing file?**
   Causes and solution:
   Volume is too low, please check volume and the earphone connection or check whether the earphone is damaged or not.

3. **Why would the computer freeze up when the player is inserted or pulled out sometimes?**
   Causes and solution:
   This is mainly caused by inserting or pulling out the player during data transfer. We advise you to not interrupt the data transfer as this could cause the computer to freeze up.

4. **Why are the songs not played or recorded, and "No files" appears?**
   Causes and solution:
   You may mistakenly have used the NTFS format to format the player so the player cannot work normally. Please use FAT32 or FAT16 to format the player again to regain normal state.

5. **Why is the time displayed in disorder when some songs are played?**
   Causes and solution:
   At present, we adopt VBR format to compress MP3 file (that is, MP3 file is compressed by variable rates). The variation of rates during playing can cause the displayed time changes, but the playing remains normal. You can use the fixed rate to compress again to solve the problem of the displayed time.

6. **When power is on, no display content or the player cannot be recognized by the system, why?**
   Causes and solution:
   Under power off state, take out the battery, press **Menu** and connect the player to the PC through the USB cable. After ten seconds, stopping pressing **Menu** and the system will find the hardware. Then click software-upgrade program. After that, click "start" to finish the upgrading. When the process is over, please press "close" to quit. After the system is upgraded, the player will regain normal state.

Chapter 7：Technical Specifications

Music Format: MP3, WMA, WAV
Bits Rate: 32Kbps~320Kbps
FM Frequency Range: 76.5~108.0MHz
Recording Format: WAV
A-B Repetition: support
Memory Size: 512MB/1G/2G
Size: R31X23 MM

Screen: LCD Screen 96 x 32 Dots Matrix Display
Port: Mini USB 2.0
Battery: 1.5V AAA Alkaline Battery
Weight: 36.6g (Not including battery)
Supported format: FAT32 or FAT16
Supported System: Windows98SE / 2000 / XP (No need for driver in Windows2000 /XP or higher opera Tion system)